Energex Dream Thermostat EN-118A Programming Manual

Smart
Connected
Beautiful

Energex

Energex Dream Thermostat EN-118A User Manual

Step 1. Press Jog dial to open user menu.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 2. Select the desired Fan mode.

Select and press down jog dial

Energex Dream Thermostat EN-118A User Manual

Step 3. Turn off system.

Select and press down jog dial

Energex Dream Thermostat EN-118A User Manual

Step 4. Toggle and select between Fahrenheit and Celsius degree display.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

To enter 'Installer Menu'.-turn the temperature to 23C/74F, then hold and press the dial for 18 seconds

Select and press down jog dial

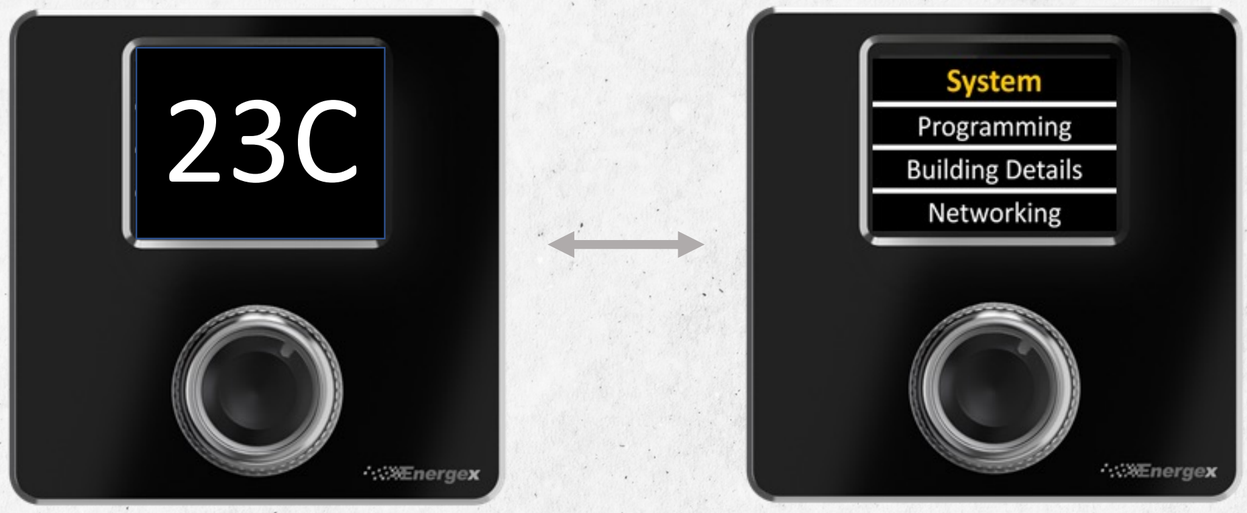

Energex Dream Thermostat EN-118A Programming Manual

Step 1. Select ‘System’ to enter HVAC system type.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 2. Select the correct HVAC system type.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 3. Select between ‘B’ and ‘O’ Terminals.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 4. Select the needed number of fan speeds

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 5. Select default temperature display in F/C.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 6. Navigate to the ‘PROGRAMMING’ Menu

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 7. Enter System Programming mode.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 8. Select and enter HEAT LIMIT

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 9. Select and enter COOL LIMIT

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 10. PIR Delay period (Enter 0 if NO PIR sensors are used)

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 11. Select PIR setback temperatures.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 12. Navigate to the next ‘Programming’ Menu.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 13. Select Deep Setback Option –(Lower or add by 1C after 8 hours of VACANT state).

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 14. Select Fan option (Fan works in Heat & Cool or Cool Only)

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 15. Select on-board or remote Temperature Sensor.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 16. Select to choose Ambient Temperature display..

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 17. Toggle and Select Humidity Display

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 18. Select Dimming level during low-power mode.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 18. Navigate back to installer main menu.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 19. Select ‘Building Details’ to enter room and building information.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 20. Enter the room and building 8 digit identification code (obtain from Energex) – Press OK to save.

Select and press down jog dial

Energex Dream Thermostat EN-118A Programming Manual

Step 21. Navigate back to the main installer menu.

Select and press down jog dial

Codes:

Code- 1520XXXX(room number)

Energex Dream Thermostat EN-118A Programming Manual

Step 22. Resetting the Thermostat to factory settings.

Select and press down jog dial

Turn Temperature to 24C Press and Hold dial For 10 seconds

Select 'Yes' and press dial Down to reset thermostat

Energex Dream Thermostat EN-118A Programming Manual

Press and hold any Values on the installer menu for 5 seconds to return to main screen

Select and press down jog dial

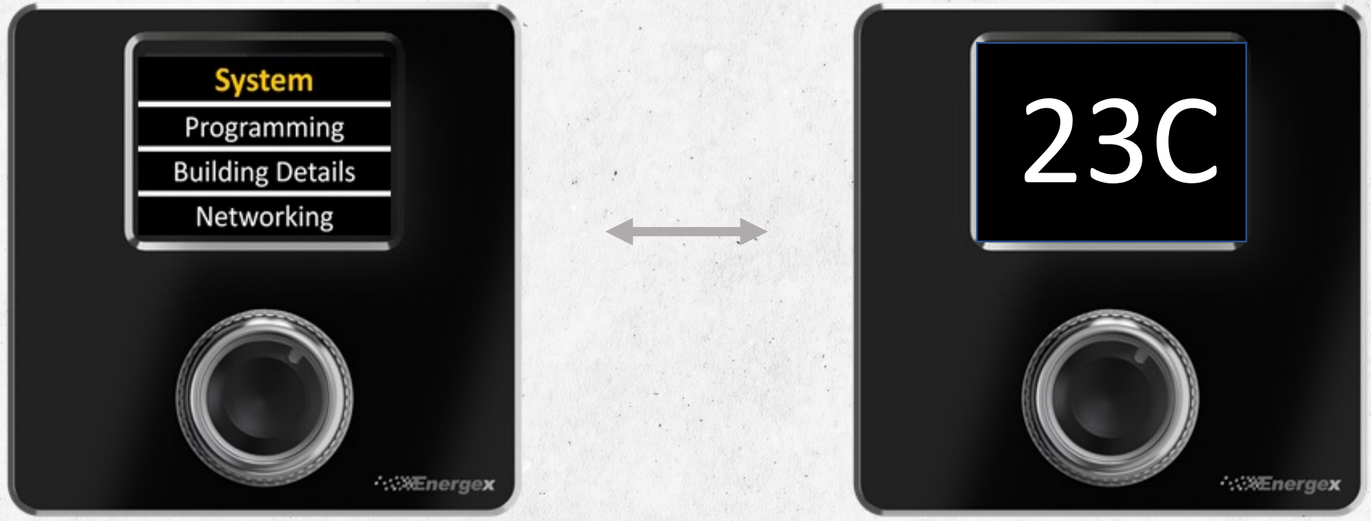

Contact Us

847-924-0058

info@eco-utility.com

www.eco-utility.com

330 Central Rd, New Lenox IL 60451